

Remove the two panel clips on the inside face of the fairing. Push the centre of the clips in to release them.



Remove the two panel clips on the inside face or the lower front edge of the fairing. Push the centre of the clips in to release them.



Ease the rear of the outer fairing panel outwards to disengage it from the inner panel.



Ease the rear of the outer fairing panel outwards to disengage it from the inner panel.

